Installation instruction

Uniguard 8


Mounting and positioning

The Uniguard should be installed according to the drawing below. The Uniguard can be installed on any side of the duct.

We recommend that the Uniguard is mounted at an equal distance from sources of interferance, and similar to the siting of flow monitors.


A distance of 3 times the duct hydraulic diameter should be left before a source of interferance, and 5 times the hydraulic diameter after.



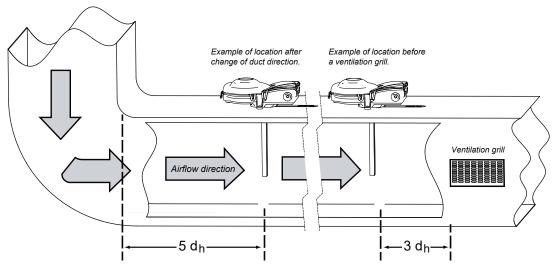



Where large temperature variations occur, e.g. on outdoor locations or in areas subject to external temperatures (roof, attics), the Uniguard should be insulated, see para 7.

 Hydraulic diameter (dh)



RECTANGULAR DUCT

 

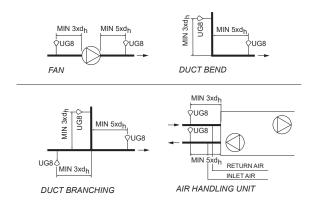

Example of installation at sources of interference:

- fan
- damper
- silencer
- battery
- air handling unit
- duct bend
- duct branching
- duct narrowing or expansion









Installation for different mounting conditions


Ø < 200 mm (2/3 ft)

- 1. For ducts smaller than 200 mm (2/3 ft), use mouting bracket UG-MB-8.
- 2. Do not cut the sampling tube PST195.
- 3. The sampling tube for UG8 should never penetrate the duct.

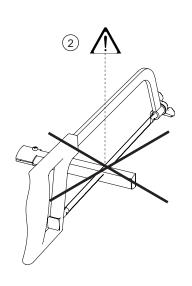

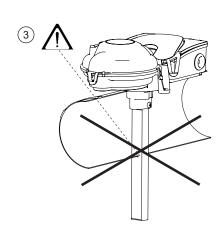



UG-MB-8

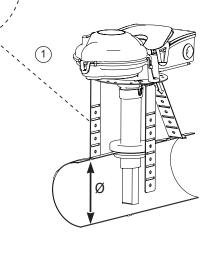

$\emptyset > 200 \text{ mm } (2/3 \text{ ft})$

- 1. For all ducts larger than 200 mm (2/3 ft) hydralic diameter, the UG8 can be mounted directly on the duct.
- 2. If the duct is insulated, use mounting bracket UG-MB-8.

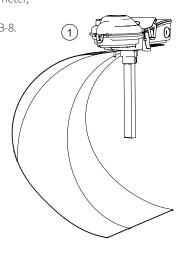

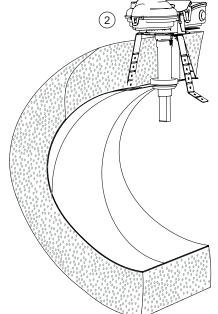

2


Drill a hole in the duct


Without mounting bracket, ø 38 mm (1,5")



With mounting bracket, ø 51 mm (2")




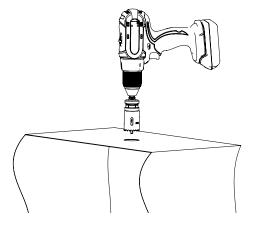

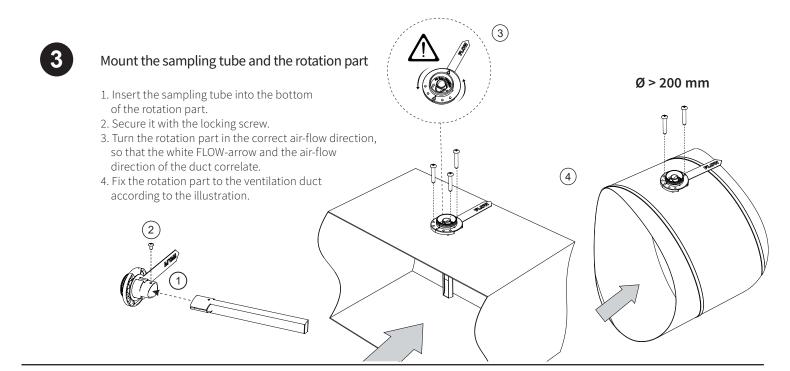

Installation on the duct


1. Mount the Uniguard on the rotation part and rotate it to a desired direction.

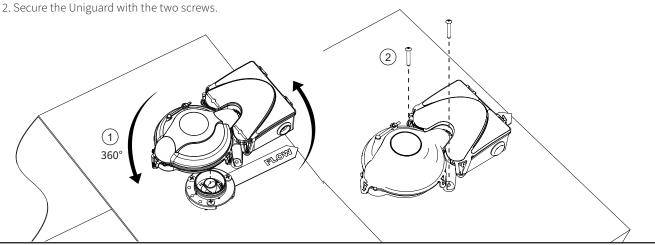

5 Electrical installation

sheet.

- Remove the cover over the connection housing by gently releasing the snap locks. Uniguard 8 has two pre-mounted IP67 approved glands for cable diameter 4-11 mm, type Klikseal. NOTE! The cable must only be pulled
 - NOTE! The cable must only be pulled through the Klikseal in one direction: into the Uniguard. To exchange a mounted cable, cut the cable outside of the Uniguard and pull out the rest from the inside.
- Connect the cable wires according to the wiring diagram, inside the cover.
 The relay outputs are shown in power off/ alarm condition. For complete technical product information, see the product data

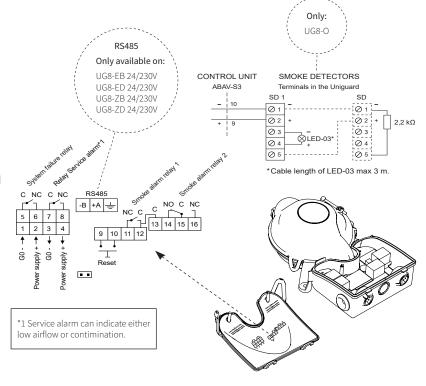

6

Test of detector


- 1. Check the detector with smoke detector aerosol test spray (e.g. SOLO A5).
- 2. Move the "test hole plug" to the side and briefly release a spray of aerosol. When alarming the LED lits red on the detector and when service alarming (contamination) it lits yellow.

IMPORTANT!

Reassemble the "test hole plug".




Do not drill any holes in the cover for signs etc. Holes will cause air leakage and seriously disturb the function of the detector.

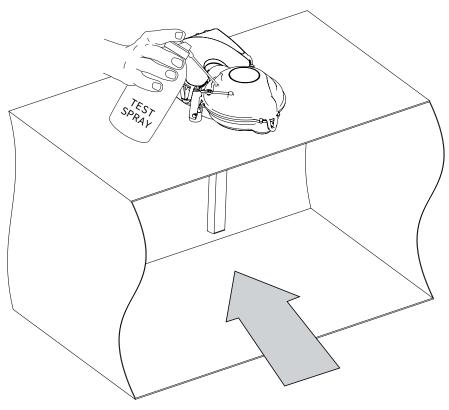




Mounting in places where possible condensation problems could arise, e.g. cold attics.

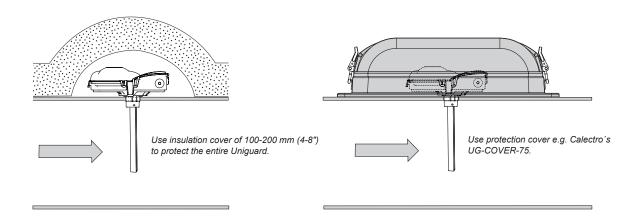


A sign should be used to show location of the detector.


For UG8-O: A remote LED alarm indication is recommended when the Uniguard is hidden.

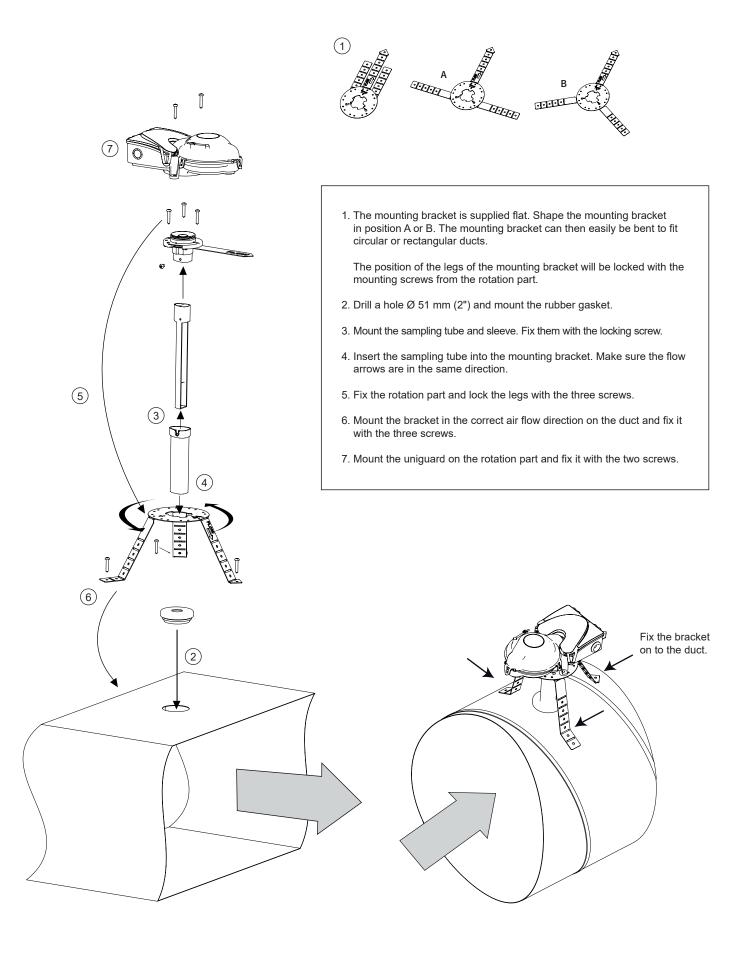


In case you need to replace the smoke detector

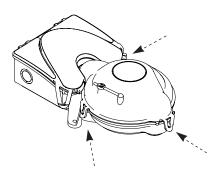


1. Remove the cover by gently bending the snap locks outwards.

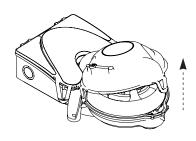


2. Detach the cover.

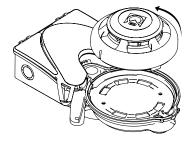


 Remove the smoke detector by rotating it counterclockwise approximately 1/5 turn.

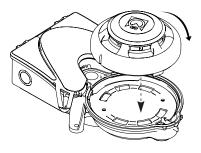

4. Insert the new detector and rotate it clockwise.

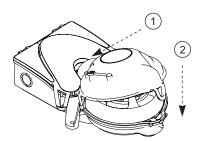

 Reattach the cover. (1) Start by placing the "lip" of the cover in the cavity next to the air inlet.
Then press down the cover.

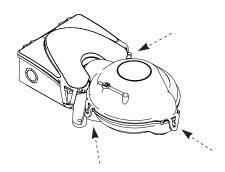

Check that all three snap locks are properly pressed in place.

FINAL CHECKS

- Check that the rotation part of the Uniguard is correctly installed according to the air flow in the duct.
- Check that the plastic plug of the test hole is properly installed.
- It is recommended that smoke from a smoke generator is introduced into the duct to check the detector's function.

Trouble shooting

The smoke detector indicates alarm without smoke.

• Smoke detector is faulty or contaminated. The detector needs to be replaced.



According to WEEE (Waste of Electrical and Electronic Equipment) directive, you must at the end of life of the product dispose of it separately at an appropriate collection point and not place it with unsorted waste. Alternatively return it to Calectro for recycling.

